

Dplus Radio Commands					
Function	1 st through 6 th positions	7 th position	8 th position	Complete Command URCall	Description
Echo Test	*****	*	E	*****E	7 spaces and an "E" in position 8
Simulcast	XXNYYY	*	*	XXNYYY**	simulcast to all modules
Info	*****	*	I	*****I	If not linked sends repeater voice id if there is one. Also send text "unlinked" message. If linked, plays the linked message. Dplus version 2.2j sends text containing the reflector or repeater to which the repeater is linked.
Link	XXNYYY	M	L	XXNYYYML	to link current module to gateway XXNYYY module M. Use "REFNNML" to link reflector NNN module M.
Unlink	*****	*	U	*****U	to unlink
Script execute	XXNYYY	n	X	XXNYYYnX	use "XXNYYYnX" to run script /dstar/scripts/exec-n.sh. You can use characters 0-9 and A-Z for the "n".
XReflector Radio Commands (Dextra)					
Function	1 st through 6 th positions	7 th position	8 th position	Complete Command URCall	Description
Link	XRFNNN	M	O	XRFNNNMO	Link to an Xreflector. Example: To link to XRF038A put XRF038AO in the URCall field where N equals the reflector number with leading zeros, M equals the reflector module and O for Link.
Unlink	*****	*	T	*****T	Unlink from an Xreflector
Info	*****	*	Z	*****Z	Obtain linking info. Xreflector voice whether linked or unlinked. Message text show where linked.

* = space

dplus_radio_commands_10_NOV_2013.xls